

| Kit Contents | | |
|-----------------------|----------|-----|
| Description | Part No | Pcs |
| Shock absorber | HD 764 | 2 |
| Washer | 03118-08 | 8 |
| Sleeve | 00123-17 | 4 |
| Tool preload adjuster | 03199-01 | 1 |
| Sticker set "ÖHLINS" | 10207-01 | 1 |
| Owners manual | 07241-02 | 1 |

👁 Note!

Please note that there can be small differences between your product and the images in these instructions.

👁 Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

👁 Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

⚠ Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Shock absorber for Harley Davidson FXD

HD 764

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

👁 Note!

When you work with this product, see the vehicle service manual for vehicle specific procedures and important data.

👁 Note!

Before you install this product clean the vehicle.

1

Put the motorcycle on a work stand so that the rear wheel barely touches the ground.

2

Loosen and remove the original shock absorber.

3

Install the Öhlins shock absorber in the same position as the original shock absorber. The fill screw pointing towards the rear. Note that the cylinder head is slightly angled, position the shock absorber so that the reservoir is pointing out from the vehicle. See figure.

👁 Note!

Lower the vehicle so that the suspension is slightly compressed before you tighten the screws.


👋 Caution!

Make sure that you tighten all screws to the correct torque and that nothing fouls or restricts movement of the shock absorber/front fork/steering damper when the suspension is fully compressed or extended.

ADJUSTMENTS

⚠ Warning!

Before you ride/drive, always make sure that the setup is according to the recommended setup data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

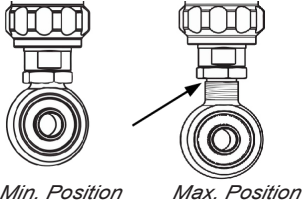

⚠ Warning!

The adjustable end eye/bracket must not be threaded out more than that the groove is fully visible beneath the lock nut. This is maximum length. After adjusting, make sure that the lock nut is tightened (30Nm).


SETUP DATA

Recommended set-up

| | |
|------------------------|-----------|
| Spring Preload..... | 21 mm. |
| Compression adjuster | 12 Clicks |
| Rebound adjuster | 14 Clicks |

Spring

| | |
|-----------------------|------------|
| Part No | 66422-032 |
| Free spring length... | 220 mm. |
| Spring rate..... | 32 N/mm. |
| Preload adj.range.... | [0-29] mm. |

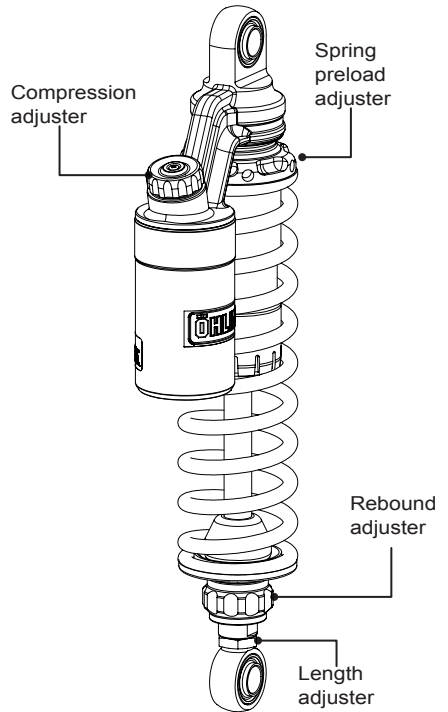

Shock absorber data

| | |
|--------------|---------------------------------------|
| Length | 336 ⁺¹⁰ / ₀ mm. |
| Stroke | 91 mm. |

👁 Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_HD 764_EN_2
Issued 2018-09-05

© Öhlins Asia Co. Ltd. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Asia Co. Ltd
700/937 Moo5, Tambol Nongkhaga,
Amphur Phantong, Chonburi Province
20160 Thailand



www.ohlins.com